

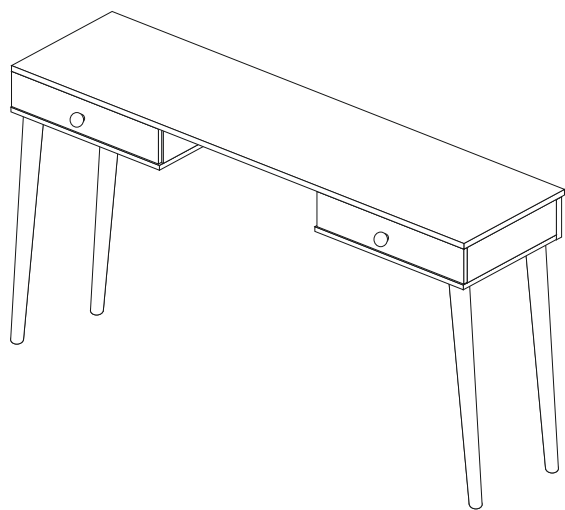
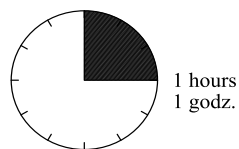
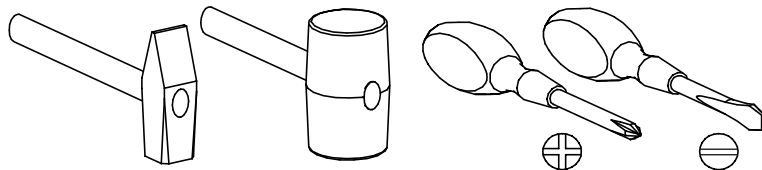
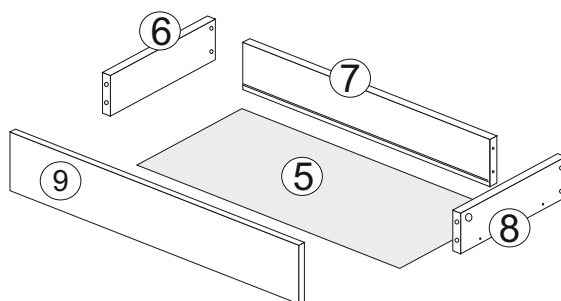
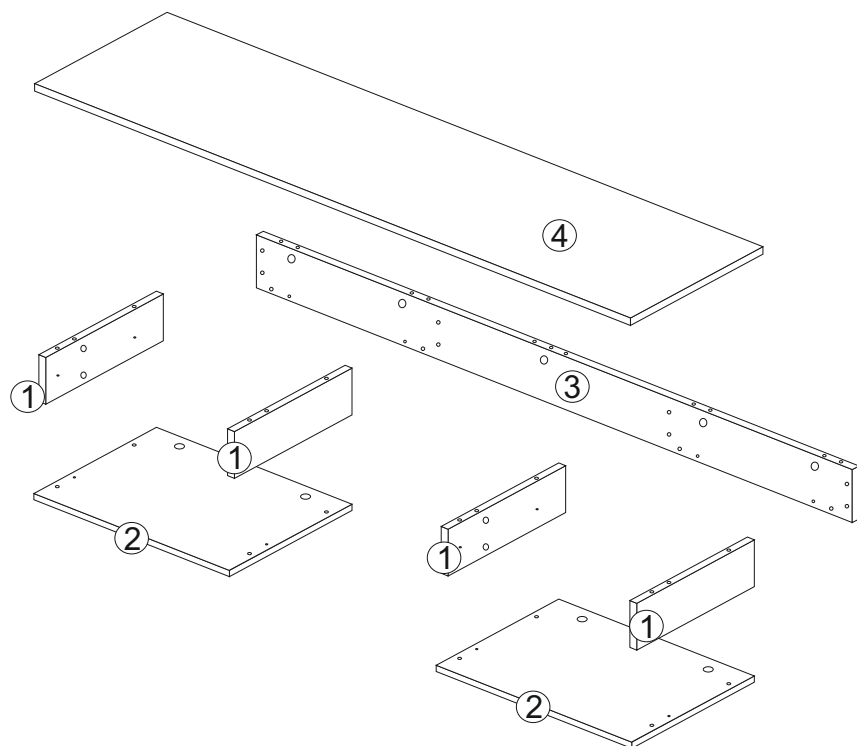
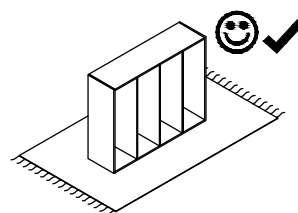
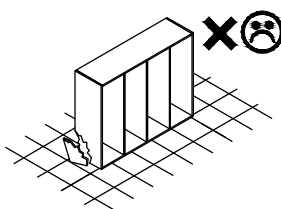
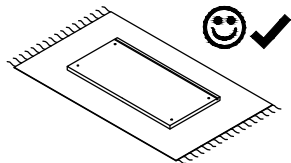
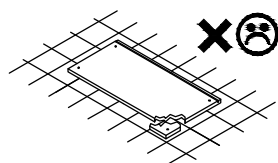
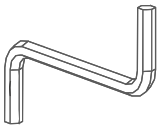















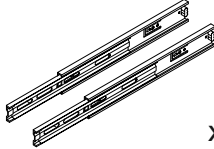


Instrukcja Montażu






1 hours
1 godz.






A  x1	B  x38	C  x21	D  x21	N  x4
W1 euro  x8	W3 35x6  x4	U  x2	L  x4	
W6 3x16  x16	T  x4	S  x4		








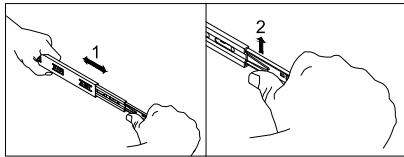
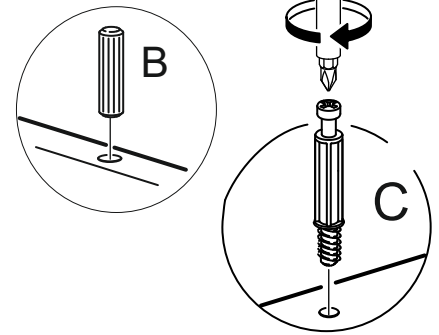

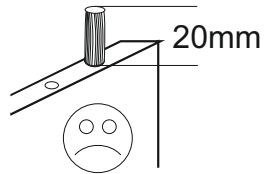
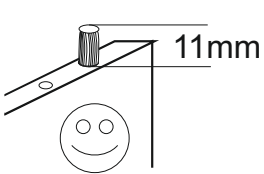


TO



T1

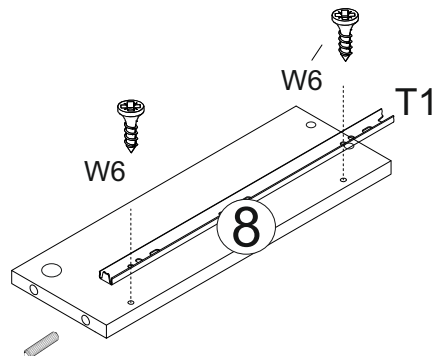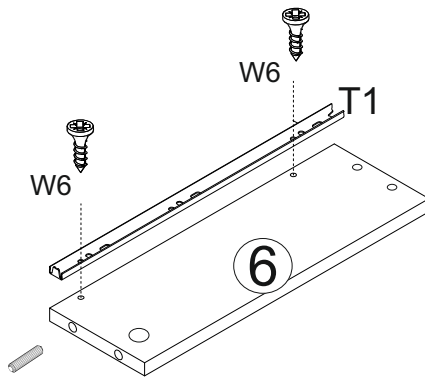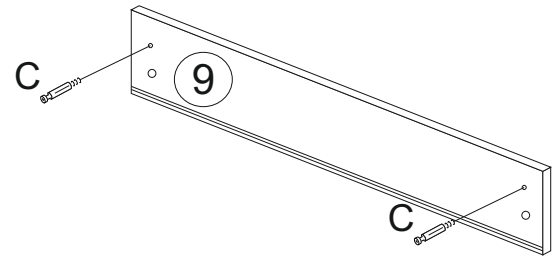

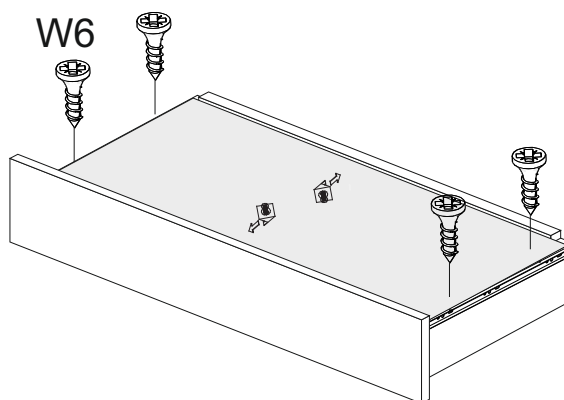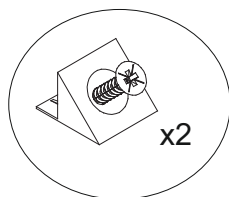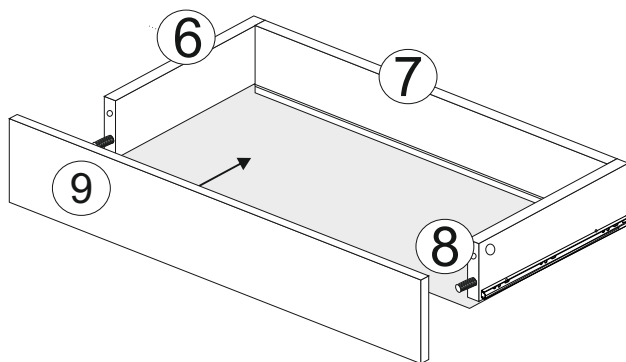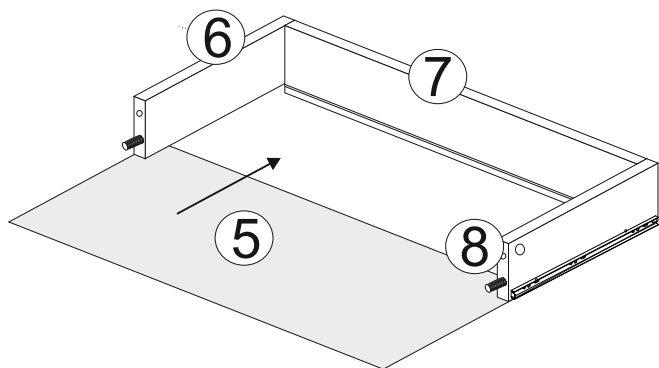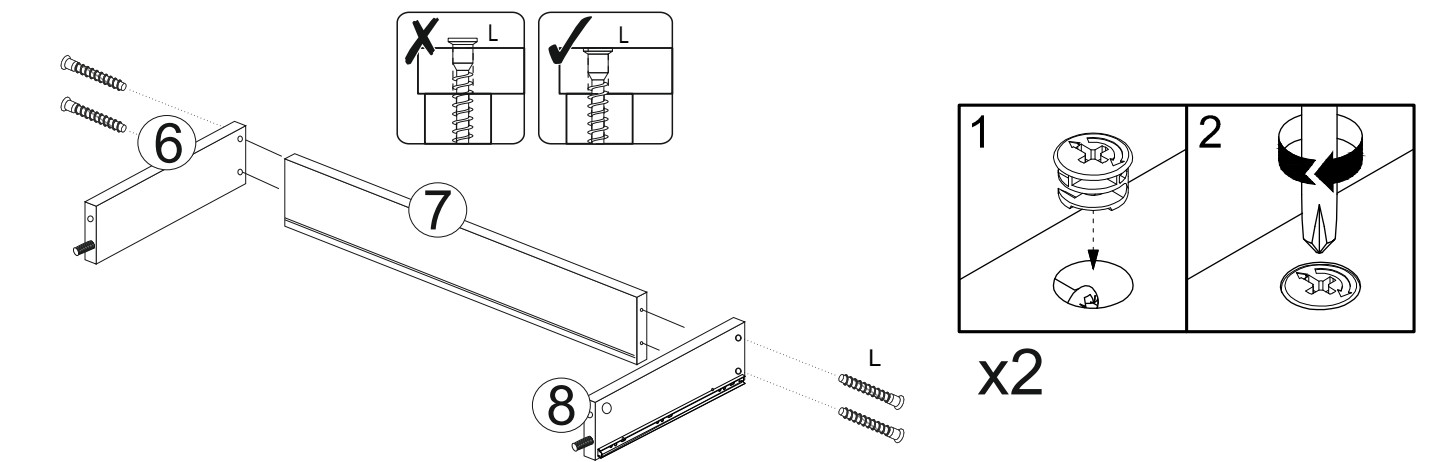


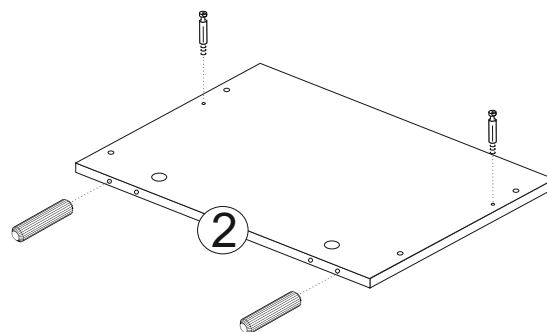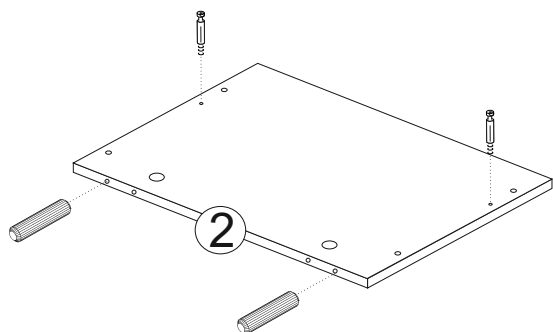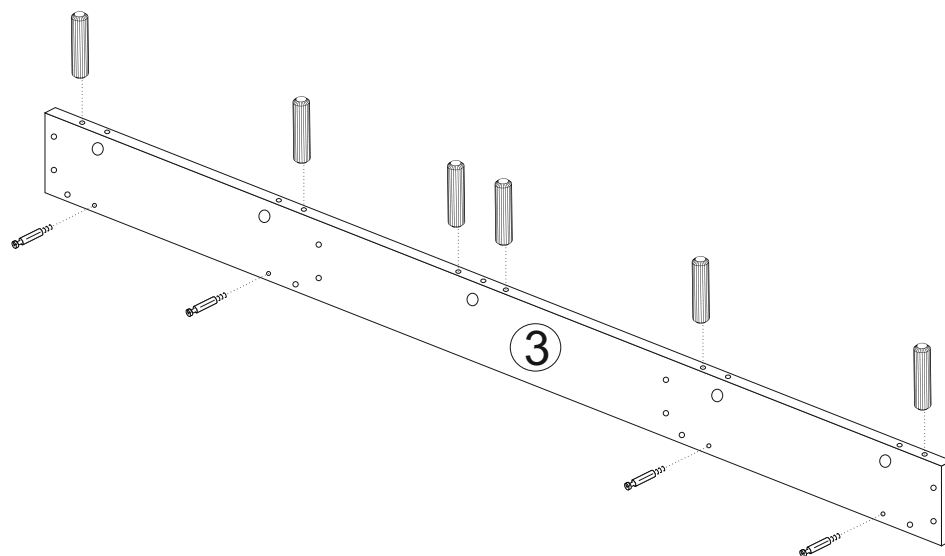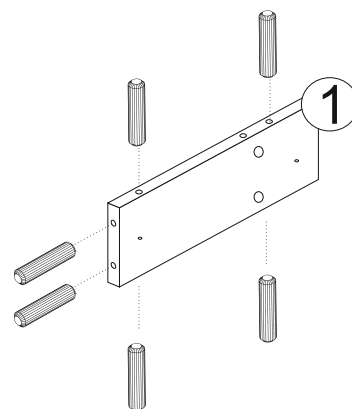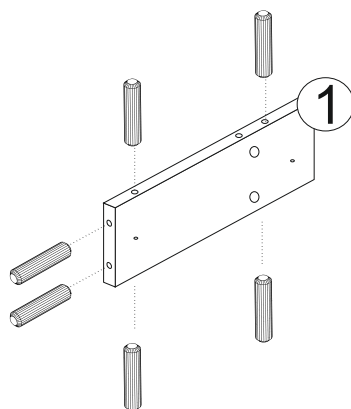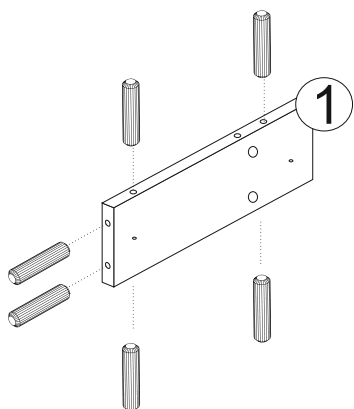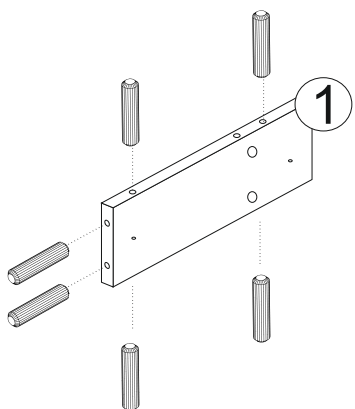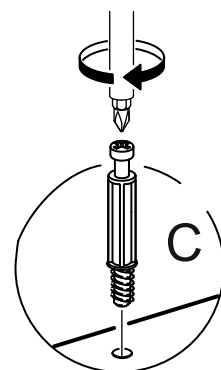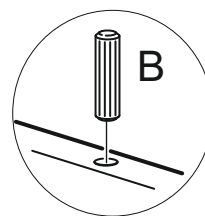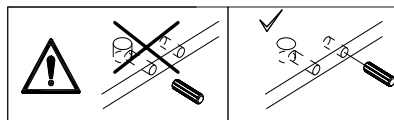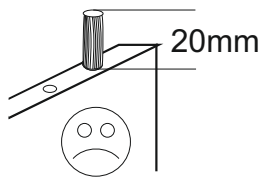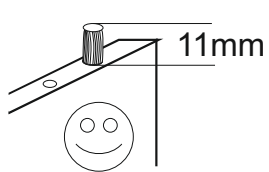


x2

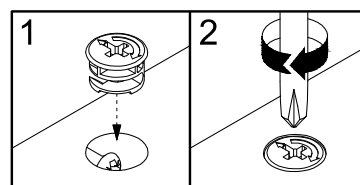
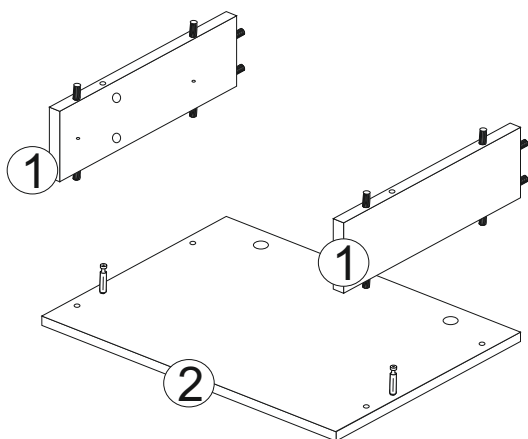


x2


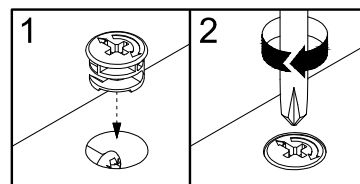






x4

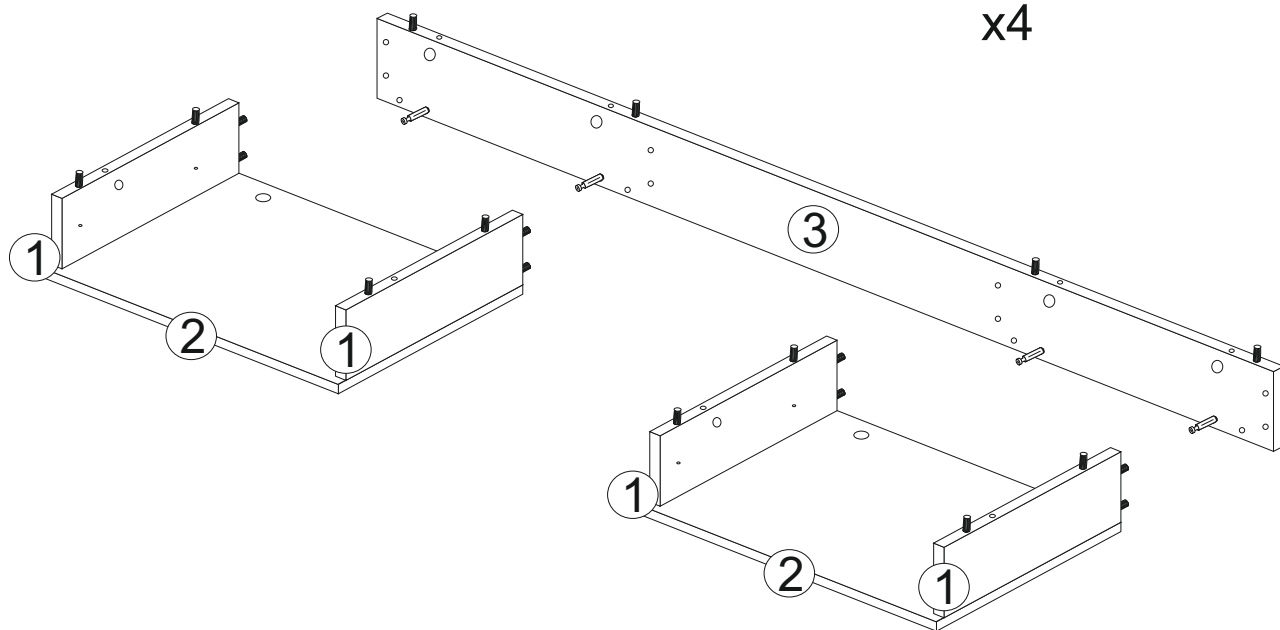

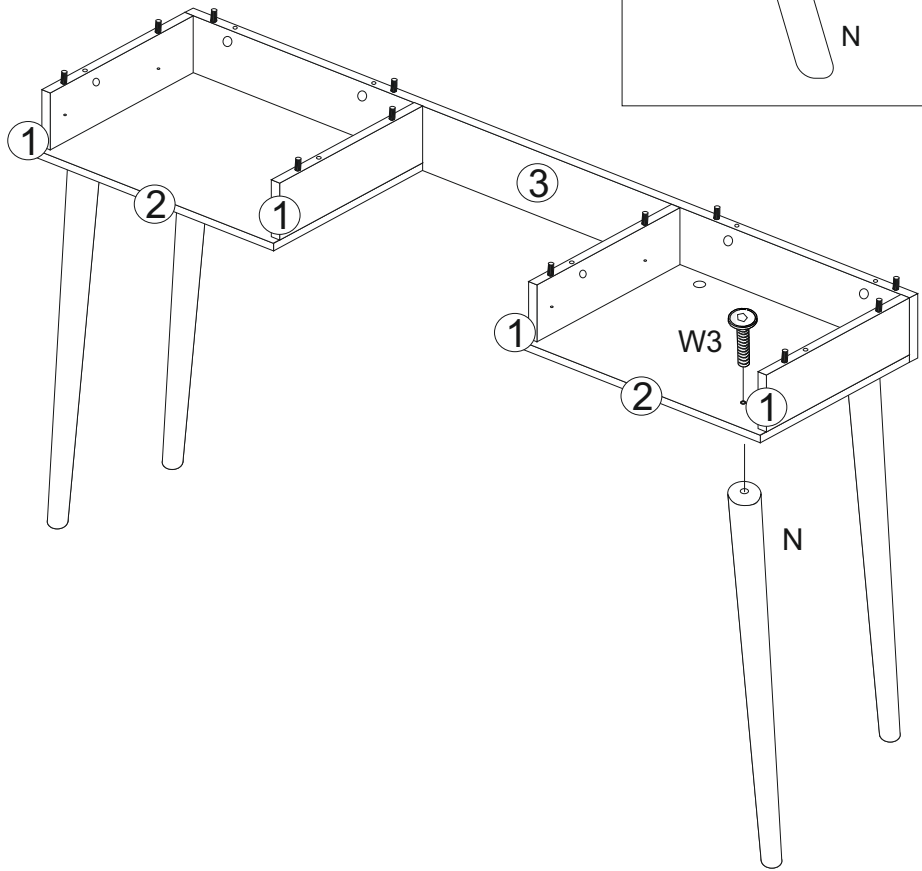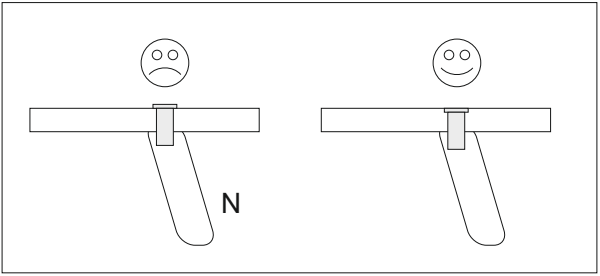

1

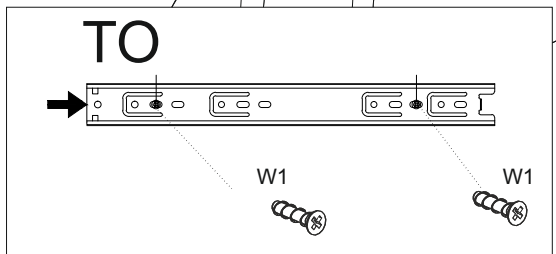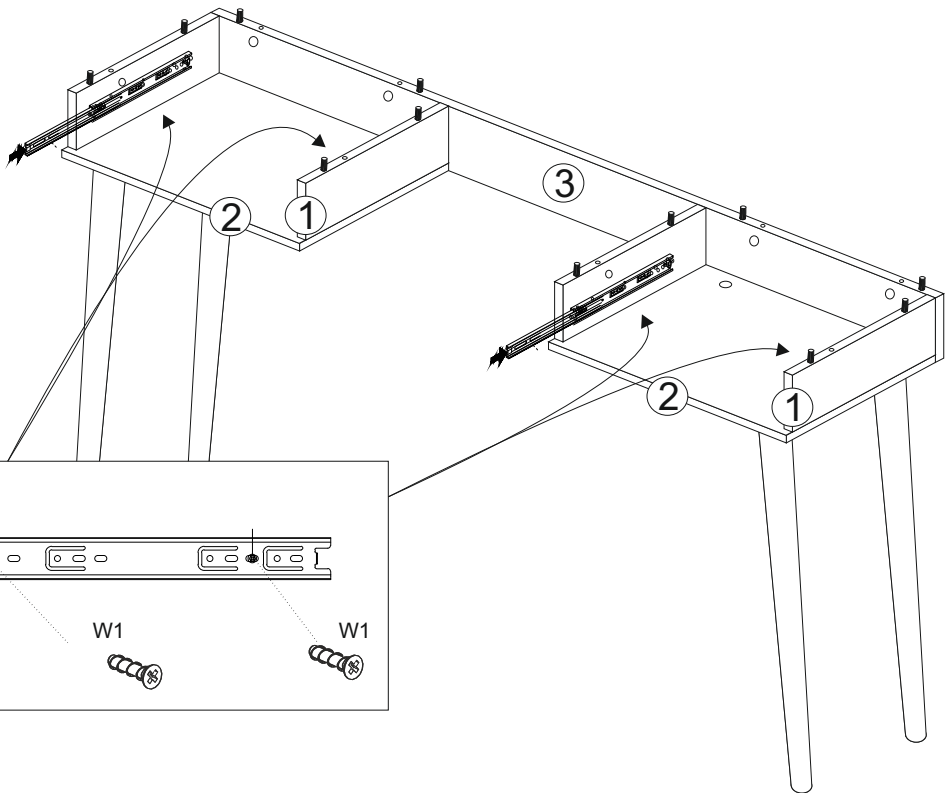

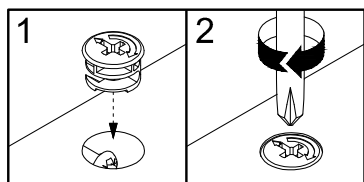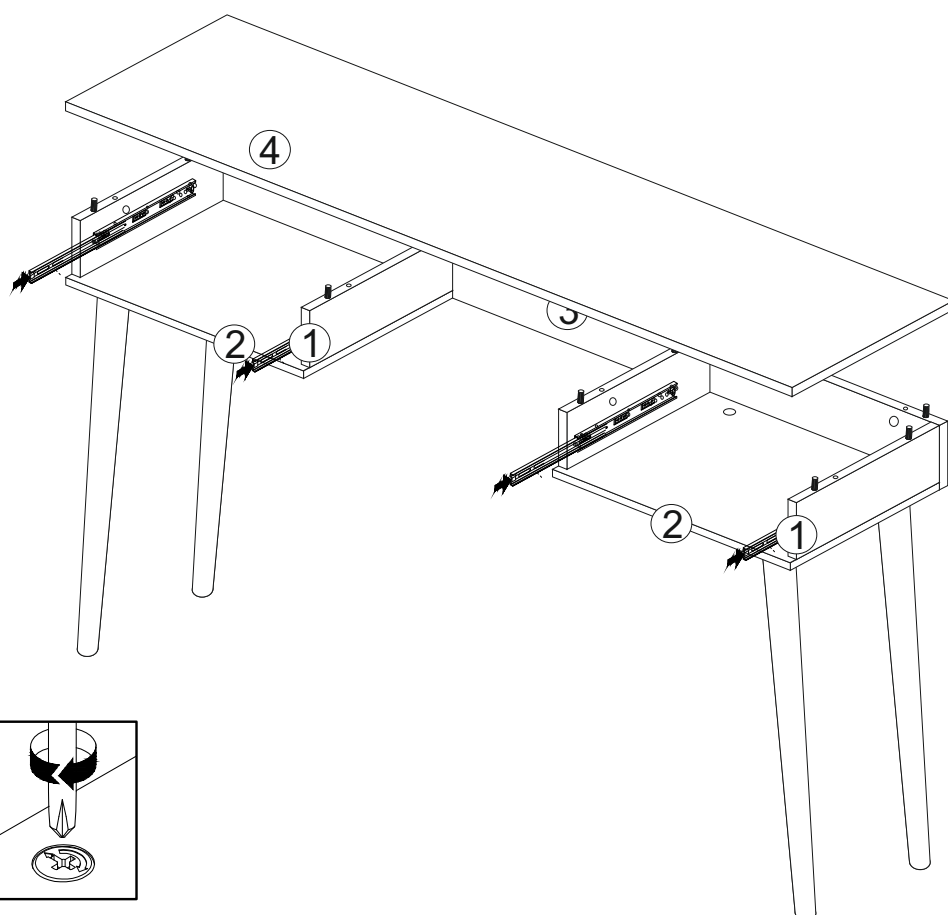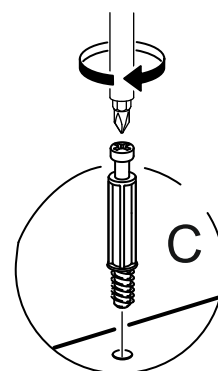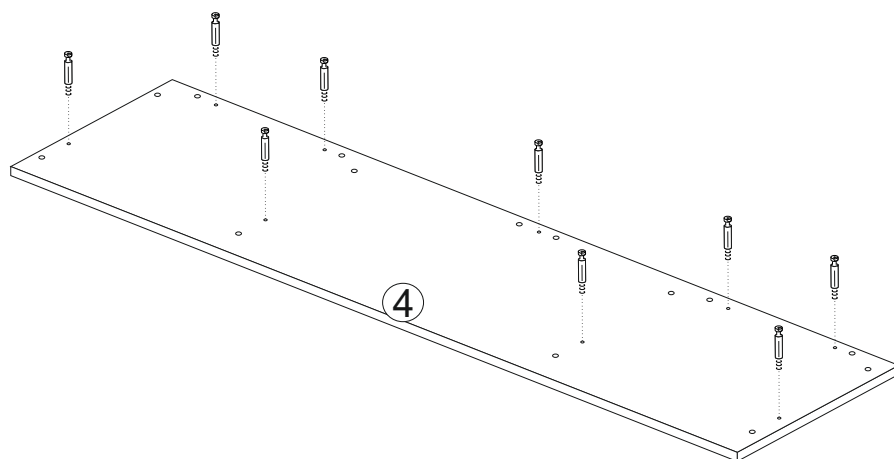

x8



KLIK!!!

